



Suggested Procedure For Using M.C. Miller Co., Inc. Soil Box

Purpose:

Measurement of electrical resistivity (in ohm-centimeter) of liquid or earth, sand or other particulate material, which can be tamped into the soil box.

Equipment Required:

- 1.) M.C. Miller Soil Box (Large Box, Catalog # 37008 or Small Box, Catalog # 37006)
- 2.) Soil Resistance Meter (e.g. Nilsson model 400, Catalog # 44106) or any ammeter/voltmeter combination together with a power supply
- 3.) Four Insulated MCM Soil Box Test Leads (Catalog # 37009)

Procedure:

- 1) Pour or tamp material to be tested into soil box until level with top of box.
 - a) If soil is the material that is being tested, remove the two brass potential pins. After removing the pins proceed to fill the soil box with the soil. When filling the box, compaction is very crucial to accurate results. Make sure that the compaction of the box resembles the compaction where the sample was taken. (See ASTM G-57 for correct procedure). Replace the brass pins.
 - b) If liquid is the material that is being tested, pour the liquid sample into the box until the box is filled. To ensure that the box is completely filled make sure the bottom of the meniscus formed from the liquid is completely level with the top of the box. If the box is not consistently filled to the same level some inaccuracies will occur.
- 2) Connect the four test lead accessories for the MCM Soil Box. (The leads are labeled C1, C2, P1, and P2).
- 3) The two outer endpins of the soil box should be connected to the resistance meter via the C1 and C2 terminals. (See diagram above)
- 4) The two inner pins of the soil box should be connected to the resistance meter via the P1 and P2 terminals.
- 5) When all of the connections are made, the resistivity value can be read from the meter in ohm-centimeters. (see section entitled, "Resistance-to-Resistivity Conversion")

Remarks:

The resistivity of both liquids and soils is a function of temperature. In order to obtain results which best agree with field conditions, the sample should be at the same temperature as would be experienced at the test site. The resistivity of soils is also a function of moisture content; therefore, all soil samples should be kept tightly capped and measured as soon as possible after they are removed from their containers. For further specifications, refer to the ASTM G57 procedure.

Soil boxes should be thoroughly cleaned with distilled water after each use.

The soil box may also be used with voltmeter/ammeter combinations together with a power supply.

Resistance-to-Resistivity Conversion:

SOIL BOX CRITICAL DIMENSIONS

The soil boxes are designed such that the cross-sectional area of the sample (A), with the box filled level, divided by the separation between the pins (L) is equal to 1cm.

- Small Soil Box (Cat. # 37006):
Cross-sectional area = $3\text{cm} \times 2.4\text{cm} = 7.2\text{cm}^2$
Pin separation = 7.2cm
 $A/L = 1\text{cm}$
- Large Soil Box (Cat. # 37008):
Cross-sectional area = $4\text{cm} \times 3.2\text{cm} = 12.8\text{cm}^2$
Pin separation = 12.8cm
 $A/L = 1\text{cm}$

SAMPLE RESISTIVITY DETERMINATION

Assuming that a change in current passing through the sample (ΔI) causes a change in voltage dropped across the pins of ΔV , the resistance of the sample would be $\Delta V/\Delta I$ and the units would be Ω , assuming that the current is in Amps and the voltage is in Volts (or that the current is in milliamps and the voltage is in millivolts).

Since, Resistivity = Resistance x (A/L), and since A/L is 1cm for the M. C. Miller soil boxes,

Sample Resistivity = Measured Resistance (Ω) x 1cm